

INDUSTRIAL PLUG-IN ALARM RELAY 5 AMP, 2 POLE

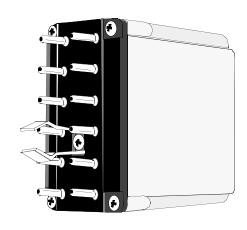

The RSX1800 Alarm Relay consists of a pair of 2 pole or 3 pole relays enclosed in a clear plastic cover.

The relay is wired so that it performs the basic functions of Interfacing between a alarm point and an alarm light and/or an acoustic sounding device.

The RSX1800 operates from a normally closed trouble contact, while the RSX1800Z operates from a normally open trouble contact. Either a sustained or momentary alarm condition will energize the relay when signalled by an external trouble contact. The Alarm can be allowed to continue until the trouble has been corrected, at which time it automatically resets.

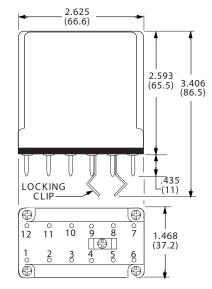


0.10 Dia. x .435 (2.54 x 11) Typical of all Pin Dimensions

COIL	DATA	
Measu	red at 25	0

AC Coils, 50/60Hz			AC Coils, 50/60Hz				
Volts Ohms		mA	Volts	Ohms	mA		
6	10.7	200	6	35	170		
12	41.1	100	12	150	80		
24	170	59	24	560	43		
120	4500	10	115-125	11,000	10.5		

STRUTHERS-DUNN

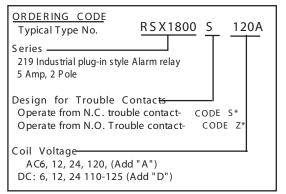

* Codes "S" & "Z" are 120 VAC only. All other codes are "AD" for NC input or "ZZ" for NO input.

MATING SOCKET 27390D

STRUTHERS-DUNN

GENERAL SPECIFICATIONS (@ 25 0C)

CONTACTS

Contact Material: Silver Cadmium Oxide.

Rating: 5 AMP, 120Vac/30Vdc Resistive 20 mS Max. @ Nominal Voltage.

TIMING

Operate Time: 25 Milliseconds max. Release Time: 20 milliseconds max.

DIELECTRIC STRENGTH

Across open contacts: 500 V rms

Between all mutually insulated current

carrying parts: 1500 V rms

TEMPERATURE

Rated Operation: -10° C to $+70^{\circ}$ C

LIFE EXPECTANCY

Mechanical: 20 Million Operations no load E lectrical: 500,000 Operations @ Rated Load.

MISCELLANEOUS

Enclosure: Clear polycarbonate.

Operating Position: Any

Weight: 8.8 oz (250 g) approx.

MANUAL RESET (RSX1800S)

LEGEND

K1 - Alarm/Silencing Relay.

K 2 - Alarm/S ilencing R elay. A - Horn & optional Flasher.

TT - Lamp test (optional).

manual reset only.

S - Horn Silence (acknowledge).

R elays are supplied only with the items and wiring shown within the

R - Reset (optional for

F - Flasher (Optional).

rectangles in schematics.

NOTE: For additional alarms, jumper to like terminals as shown.

L1 - Line voltage.

N - Neutral.

Manual (Push-button) Reset Sequence.	K1	K2	Flasher	Horn	Lamp
1- Normal	ON	ON	OFF	OFF	OFF
2- Alarm	OFF	ON	ON	ON	Flashing
3- Acknowledge	OFF	OFF	OFF	OFF	ON
4- Alarm Contact					
Recloses	OFF	OFF		OFF	ON
5- Reset	ON	ON	OFF	OFF	OFF
6- Lamp Test	ON	ON	OFF	OFF	ON

AUTOMATIC RESET (RSX1800S)

Automatic Reset Sequence.	K1	K2	Flasher	Horn	Lamp
1- Normal	ON	ON	OFF	OFF	OFF
2- Alarm	OFF	ON	ON	ON	Flashing
3- Acknowledge	OFF	OFF	OFF	OFF	ON
4- Alarm Contact Recloses	On	On	OFF	OFF	OFF
5- Lamp Out	ON	ON	OFF	OFF	ON


* OMIT for RESET (RSX1800Z)

Automatic or Manual	K1	K2	Flasher	Horn	Lamp
1- Normal	OFF	ON	OFF	OFF	OFF
2- Alarm	ON	ON	ON	ON	Flashing
3- Acknowledge	ON	OFF	OFF	OFF	ON
4- Trouble Contact Reopens. Auto reset Manual reset	OFF ON	ON OFF	OFF OFF	OFF OFF	OFF ON
5- Reset	OFF	ON	OFF	OFF	OFF
6- Lamp Test	OFF	ON	OFF	OFF	ON

^{*} External Jumper supplied be Customer.

AUTO or MANUAL RESET

RSX1800Z

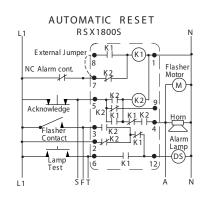

Reset No trouble contact Acknowledge K2 Flasher Flasher Contact Alarm Lamp Test K1 K1 K1 Flasher K2 K1 K1 K2 K1 Lamp K2 K1 Lamp Lamp K1 Lamp Lamp

R

STRUTHERS-DUNN